
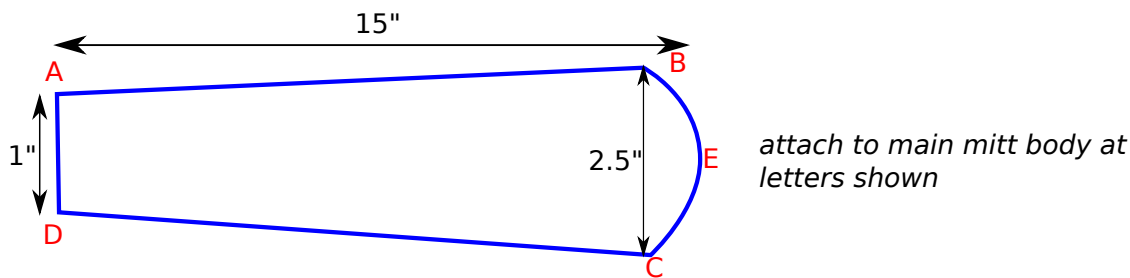


Points Unknown - Handlebar Mitts

hand warmer, covers, windbreaker, things

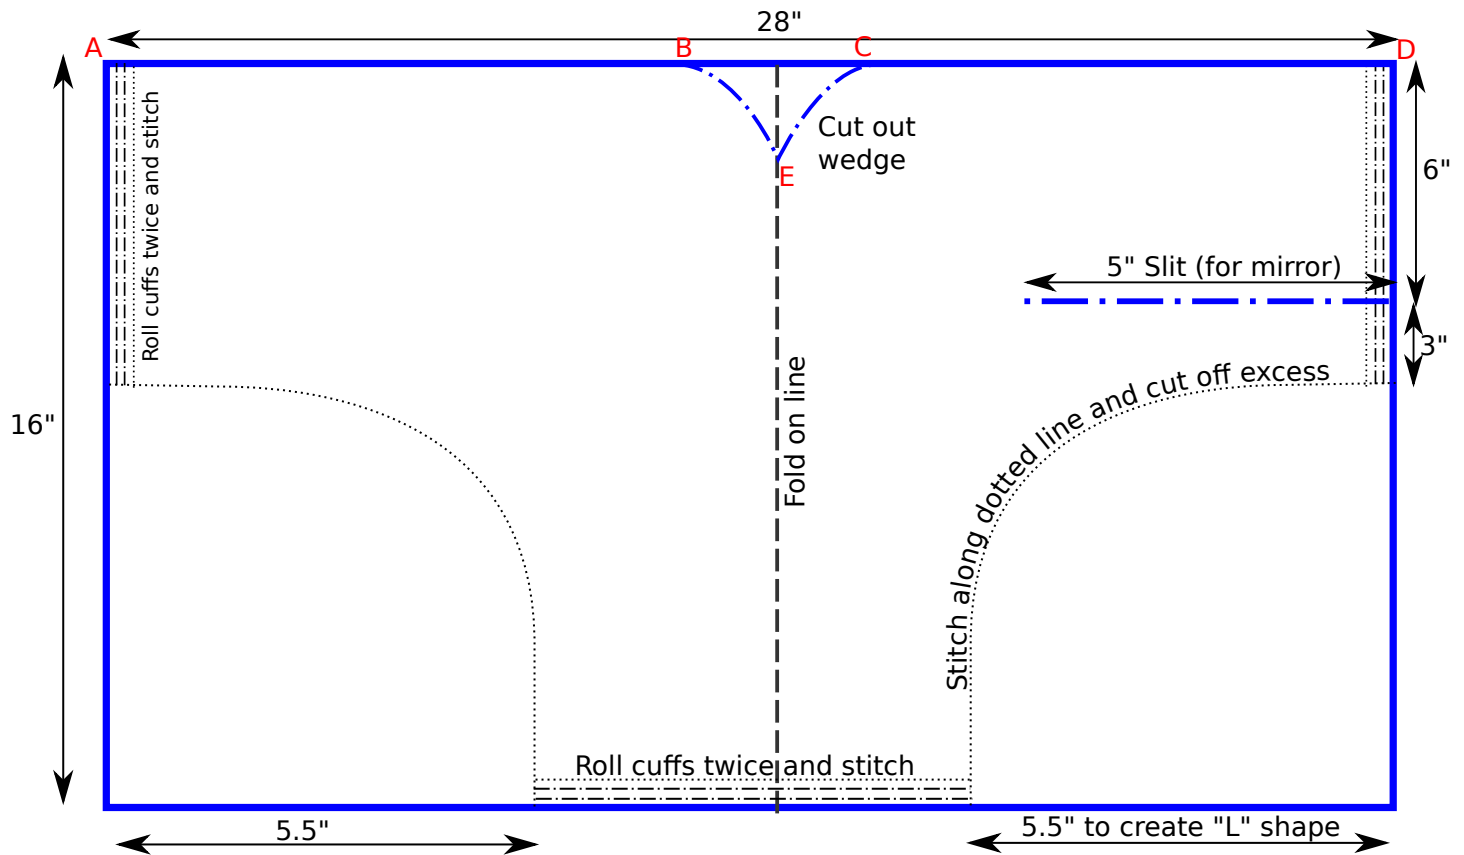

Materials needed:

- 1 to 2 yards of neoprene (1.5mm - 3mm)
- 12" of velcro (2 x 4" strips and 2 x 2" strips)
- 4" of 1" flat webbing (for end closures)
- thread

Tools needed:

- Sewing machine

Place velcro along each side of slit for mirror.

Attach strap at and (Near A and D) to close end around handlebar control cables

Adjust dimensions as necessary to fit particular bike handlebars, handguards, hand size, etc.

Drawing not even remotely not scale.